



Initial Setup for eButtonApp

1. Using the browser on your phone, go to ebutton.com.au.

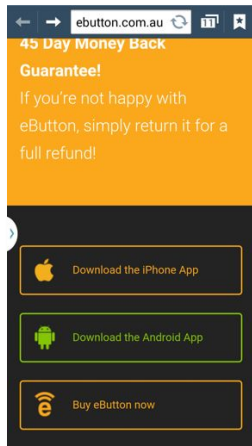

Buy the eButton

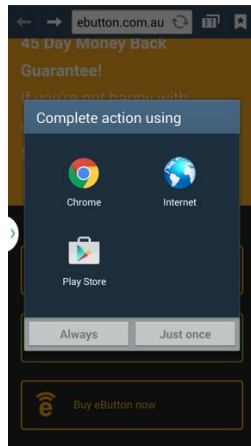


Download eButtonApp from Play Store




Install the eButtonApp

2. eButtonApp will download to your phone, and display the following screens in turn:

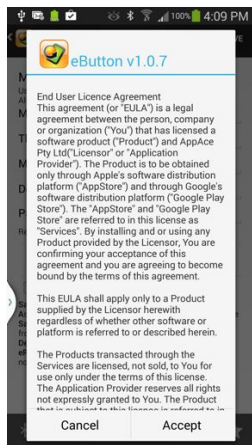


The usual legal stuff. Tap 'Accept' to proceed.

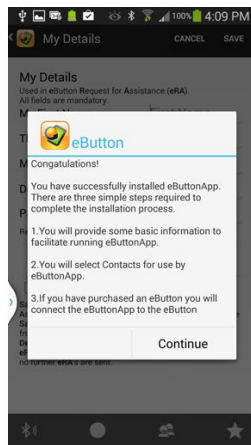


The Welcome screen outlining the 3 steps to install

3. Enter 'My Details'. These rarely change.

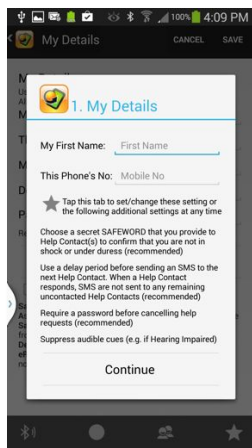


- *My First Name: The name by which you are usually known.
 - *This Phone's No: So you can be contacted easily. Inclusion of country codes is recommended.
- When Name and Phone No are entered, tap 'Continue'.
After setup is complete, you can return to this screen to enter:
- My Safe Word: Optional code word to be used if you accidentally initiate the eButton Request for Assistance (eRA). It confirms you are OK, not under duress or in shock.
 - Delay: The default period between sending successive eRA SMS to your contacts (can be 0). Once a contact responds, no further contacts receive eRA's. Location change updates are sent to anyone who has received an eRA.
 - Password: Optional to deactivate eRA's.


4. Respond to 'Help Request' and/or Select 'Help Contacts' from your existing contacts.

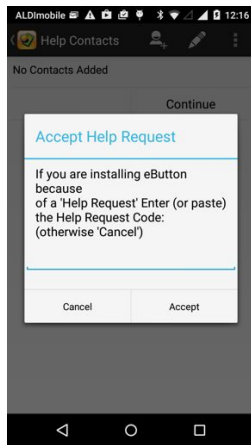

Enter Help Request Code or tap 'Cancel'

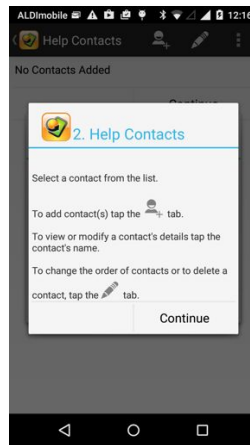


Tap 'Continue'

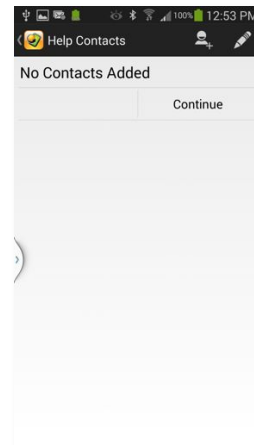

Tap [person icon] to add 'Contacts' Repeat as necessary

5. Edit Contacts if needed. Change the order of contacts or delete contacts

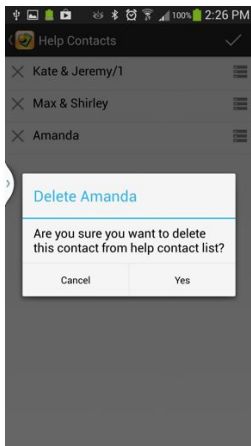

Tap to edit.

Tap to delete.

Drag to reorder

Done


Ensure Contacts phone numbers are capable of receiving SMS. Advise each Contact that they have been added to your eRA list.

If Contact has a 'Blocked' number – see section 'Help Contacts' When all details are added, tap 'Continue'


6. Link to eButton



Tap 'Continue'

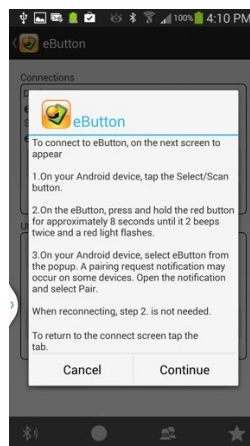


Tap 'Continue'

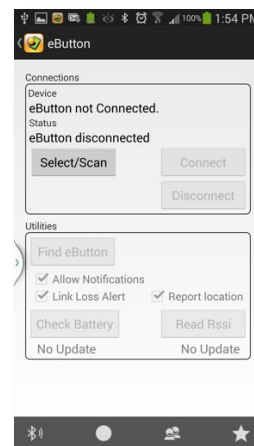

Tap 'Select/Scan'

7. 'Advertise' eButton

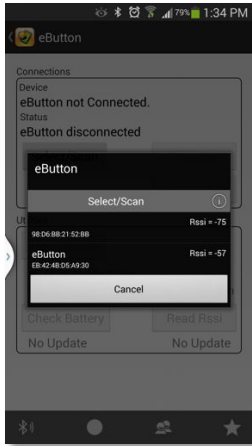


With eButton:

Press and hold red button for approximately 8 seconds until two beeps sound.


On your phone:

eButton will appear in the dialog. Select eButton

On some phones, a pairing request notification will occur. If a notification is received, open notifications. A screen similar to those below will appear.

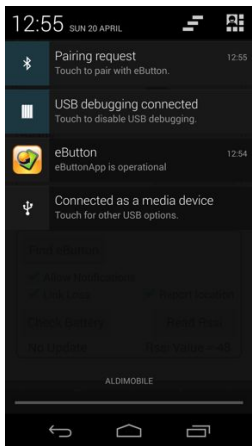

Tap on 'Pairing request'

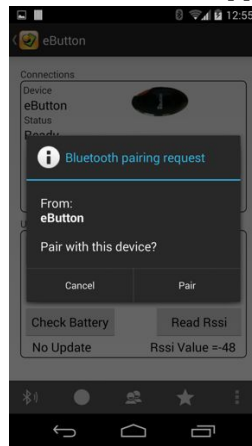


Tap on 'Pair' (or 'Allow')

Not all phones notify a pairing request.

Many phones automatically allow pairing to occur.

In such cases these 'Pairing request' screens do not appear.

On all phones, the following screens appear

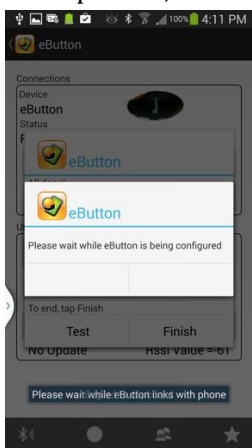

After a few seconds, the eButton will beep several times and this dialog appears.



The test connection screen will display after the low energy Bluetooth connection is done

If you have an eButton, click once to send a test SMS.

If you do not have an eButton, tap 'Test' to send a test SMS.

To end, tap 'Finish'

Your eButton is now ready to use.